

KA-01

Quick Guide

Thank you for purchasing this PENTAX Digital Camera.


When you use this camera for the first time, it is recommended you read this Quick Guide first in order to gain a feel for the basic operation of the camera. Refer to the separately supplied "Operating Manual" for further explanation of functions and advanced operations of the camera.

Checking the Contents of the Package

Check that your camera came complete with the items listed below.

- Camera
- Strap O-ST120
- Software (CD-ROM) S-SW120
- USB cable I-USB7
- Rechargeable lithium-ion battery D-LI90
- Battery charger D-BC90
- AC plug cord
- Hot shoe cover (Installed on camera)
- Body mount cover (Installed on camera)
- Operating Manual
- Quick Guide (this guide)


Names of Parts and Monitor Indicators

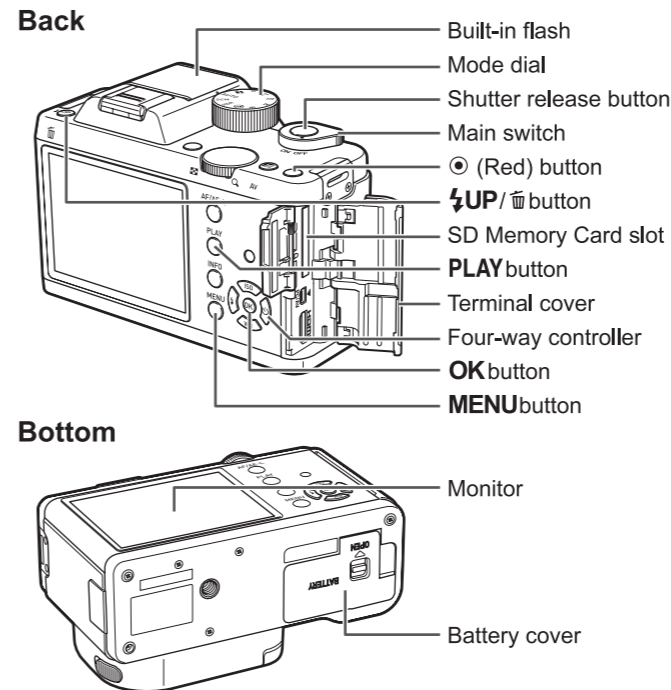

In this Quick Guide, the arrow keys to be pressed are expressed as indicated on the right.


Monitor Indicators

The following indicators are displayed in the standby mode.

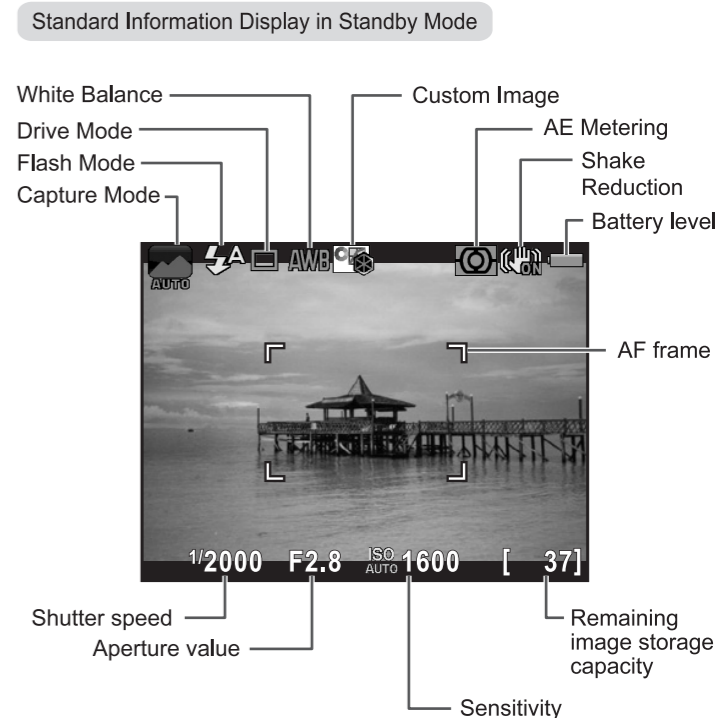

1 Preparing the Camera for Use


Attaching the Strap and Lens

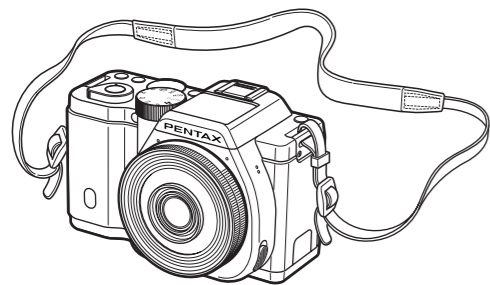

→ Operating Manual (p.38, p.47)

Installing the Battery and SD Memory Card


Charge the battery before use.

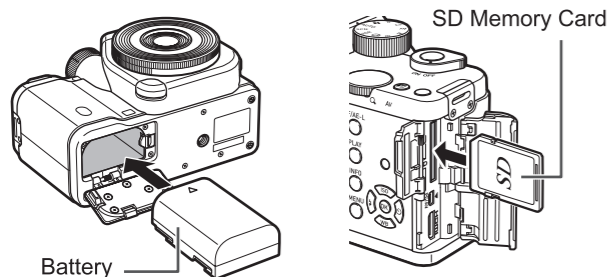

→ Operating Manual (p.39, p.45)

2 Turning the Camera On

Turn the main switch to ON.

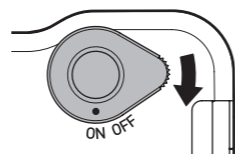


Making the Initial Settings

The [Language/言語] screen appears when the camera is turned on for the first time. Select the desired language and then set the date and time.

- Use the four-way controller (▲▼◀▶) to select the desired language.
- Press the **OK** button.
The [Initial Setting] screen appears.
- Press the four-way controller (▼) to move the frame to (Hometown).



- Press the four-way controller (▶) to display the [Hometown] screen.
- Use the four-way controller (◀▶) to choose a city.
- Press the four-way controller (▼) to move the frame to [DST] (Daylight Saving Time).
- Use the four-way controller (◀▶) to select (On) or (Off).
- Press the **OK** button to display the [Initial Setting] screen again.
- Press the four-way controller (▼) to select [Settings complete], and press the **OK** button.
The [Date Adjustment] screen appears.
- Press the four-way controller (▶) to select [mm/dd/yy], and use the four-way controller (▲▼) to choose the date format.
- Press the four-way controller (▶) to select [24h], and use the four-way controller (▲▼) to select [24h] or [12h].
- Press the **OK** button, and press the four-way controller (▼) to move the frame to [Date].

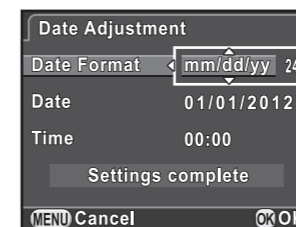


- Press the four-way controller (▶) to select [01] (month), [01] (day) or [2012] (year), and use the four-way controller (▲▼) to set the date to the current day.
- Press the **OK** button, and press the four-way controller (▼) to move the frame to [Time].
- Set the time in the same manner as in 13.
- Press the four-way controller (▼) to select [Settings complete], and press the **OK** button.

Formatting an SD Memory Card

Use this camera to format (initialize) an SD Memory Card that is unused or has been used on another camera or digital device.

→ Operating Manual (p.199)

Be aware that formatting deletes all the data stored in the SD Memory Card.

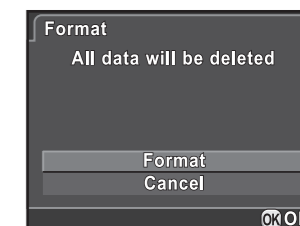

Continue on the reverse side.

3 Taking Pictures


Once the camera is ready for use, you can start taking pictures.

Letting the Camera Choose the Optimal Settings

First, try taking pictures with the easiest way.


1 Set the mode dial to AUTO.

In **AUTO** (Auto Picture) mode, the camera will automatically select the optimal capture mode for your subject.

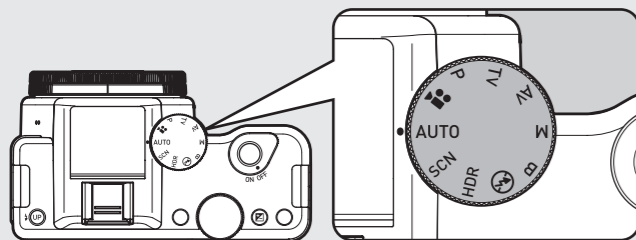

2 While viewing the monitor, position the subject inside the AF frame.

3 When using a zoom lens, turn the zoom ring to frame the subject.

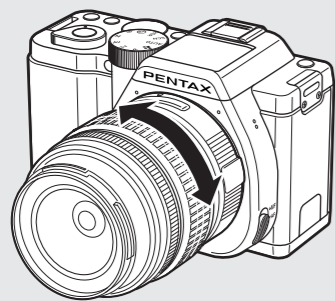

4 Press the shutter release button halfway.

The AF frame turns green when the subject comes into focus.



5 Press the shutter release button fully.

The picture is taken.


→ Operating Manual (p.56)

Taking Pictures According to the Shooting Scene

You can choose from various types of scene modes to match the shooting conditions.

1 Set the mode dial to SCN.

The Scene Mode selection screen appears.

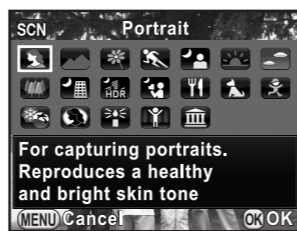

2 Use the four-way controller (▲▼◀▶) to choose a scene mode, and press the OK button.

The camera is ready to take a picture.

→ Operating Manual (p.76)

Recording Movies

1 Set the mode dial to .

2 Position the subject on the monitor, and press the shutter release button halfway.



3 Press the shutter release button fully.


Movie recording starts.

4 Press the shutter release button again.

Movie recording stops.

→ Operating Manual (p.116)

Memo


 
 

 
 
 
By default, the  (Red) button is also available to record a movie.

→ Operating Manual (p.118)

 
 
Using the Four-way Controller


In standby mode, you can select the following functions by using the four-way controller.

Flash Mode

Select from  (Auto Flash Discharge),  (Auto Flash+Red-eye Reduction),  (Manual Flash Discharge),  (Manual Flash+Red-eye Reduction),  (Slow-speed Sync),  (Slow-speed Sync+Red-eye), or  (Trailing Curtain Sync).

The flash modes that can be selected differ depending on the capture mode.

When  or  is selected, the built-in flash pops up automatically when necessary.

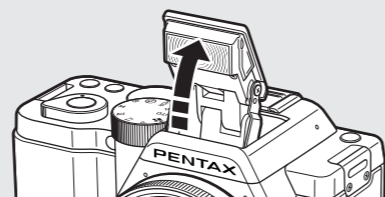


→ Operating Manual (p.59)




 
 
Sensitivity

Select from [ISO AUTO] or [ISO] (fixed value).

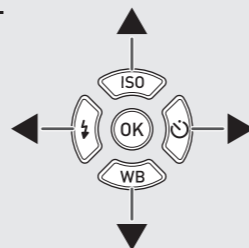→ Operating Manual (p.79)




 
 
 
 


Drive Mode

Select from  (Single Frame Shooting),  (Continuous Shooting),  (Self-timer),  (Remote Control), or  (Exposure Bracketing).

→ Operating Manual (p.106, p.102, p.104, p.85)

White Balance

Select from **AWB** (Auto White Balance),  (Daylight),  (Shade),  (Cloudy),  (Fluorescent Light),  (Tungsten),  (Flash), **CTE**, or  (Manual).

→ Operating Manual (p.130)


4 Reviewing Images

You can play back captured images on the monitor.

1 Press the PLAY button after taking a picture.

The captured image is displayed on the monitor.

2 Use the four-way controller (◀▶) to display the previous or next image.

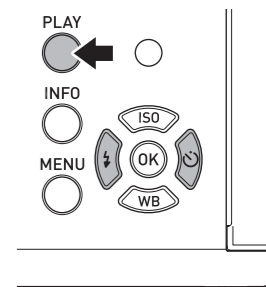


Memo

You can display multiple images at once.

→ Operating Manual (p.158)

Deleting a Single Image

1 Display the image you want to delete.

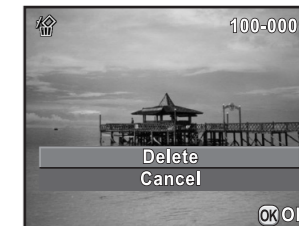

2 Press the / button.

The delete confirmation screen appears.

3 Press the four-way controller (▲) to select [Delete].

4 Press the OK button.

Memo

You can delete multiple images at once.

→ Operating Manual (p.163)

Selecting a Playback Function

You can choose the playback function you want to use from the playback mode palette.

Press the four-way controller (▼) while an image is displayed.

You can select a playback function.



→ Operating Manual (p.154)

K-01 Operating Manual

For details on how to use the K-01, refer to the Operating Manual.



PENTAX RICOH IMAGING CO., LTD. — <http://www.pentax.jp>

PENTAX RICOH IMAGING FRANCE S.A.S.
(European Headquarters)

HQ — <http://www.pentax.eu>
France — <http://www.pentax.fr>

PENTAX RICOH IMAGING DEUTSCHLAND GmbH
— <http://www.pentax.de>

PENTAX RICOH IMAGING UK LTD. — <http://www.pentax.co.uk>

PENTAX RICOH IMAGING AMERICAS CORPORATION
— <http://www.pentaximaging.com>

PENTAX RICOH IMAGING CANADA INC. — <http://www.pentax.ca>